

tables coffee

 
TB 29H, TB 29 L, TB 29R L, TB 29R H, TB 29 SQ 420,
TB 29 SQ 570, TB 29 SQ 800, TB 29 EP 1300,
TB W 74 H, TB W 74 L

installation manual




bejot:


1

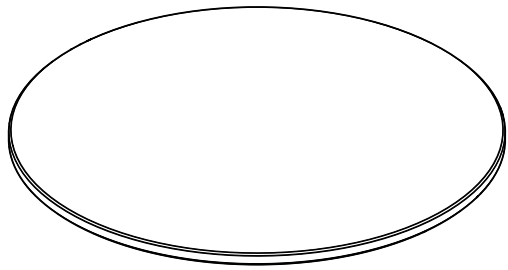


2

 


3

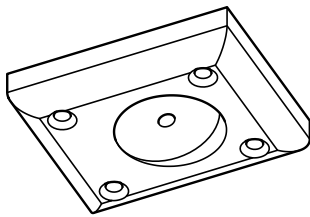 

4

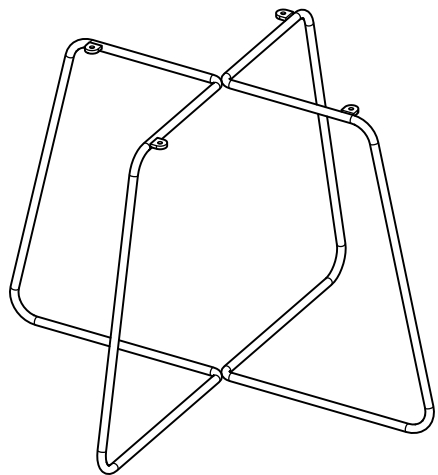 




5

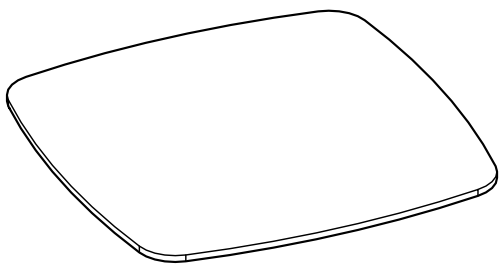 






PEOPLE




   ADDITIONAL TOOLS

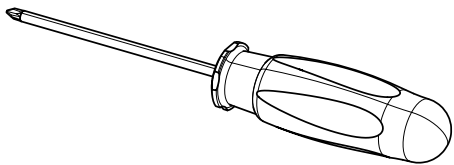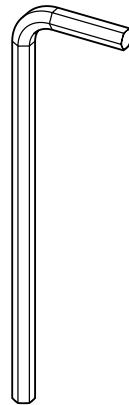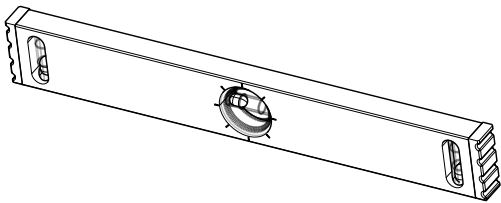


ATTACHED

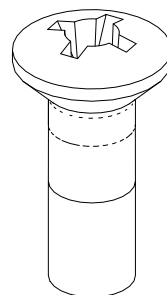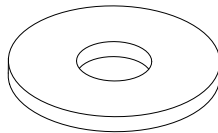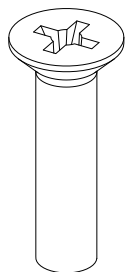    
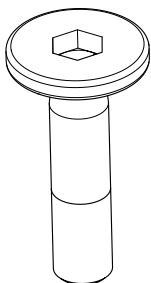 


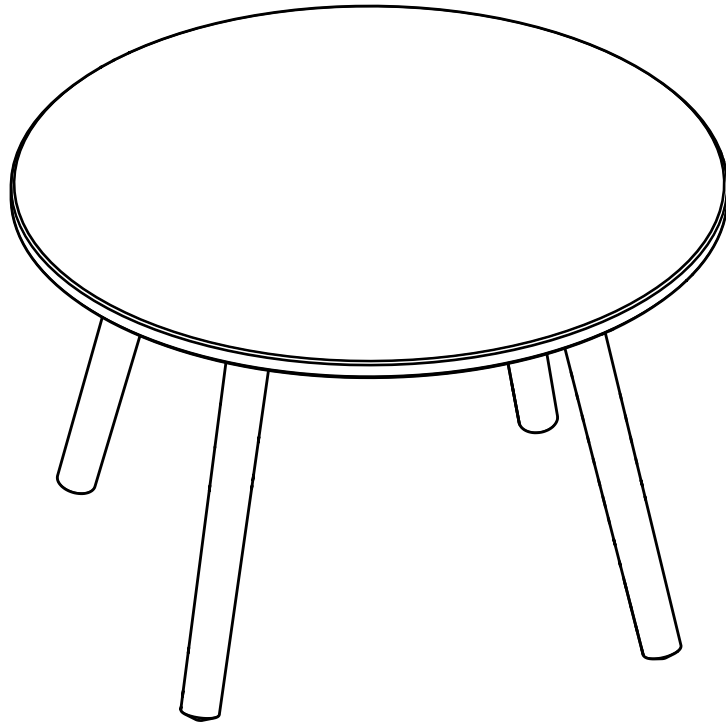 

1

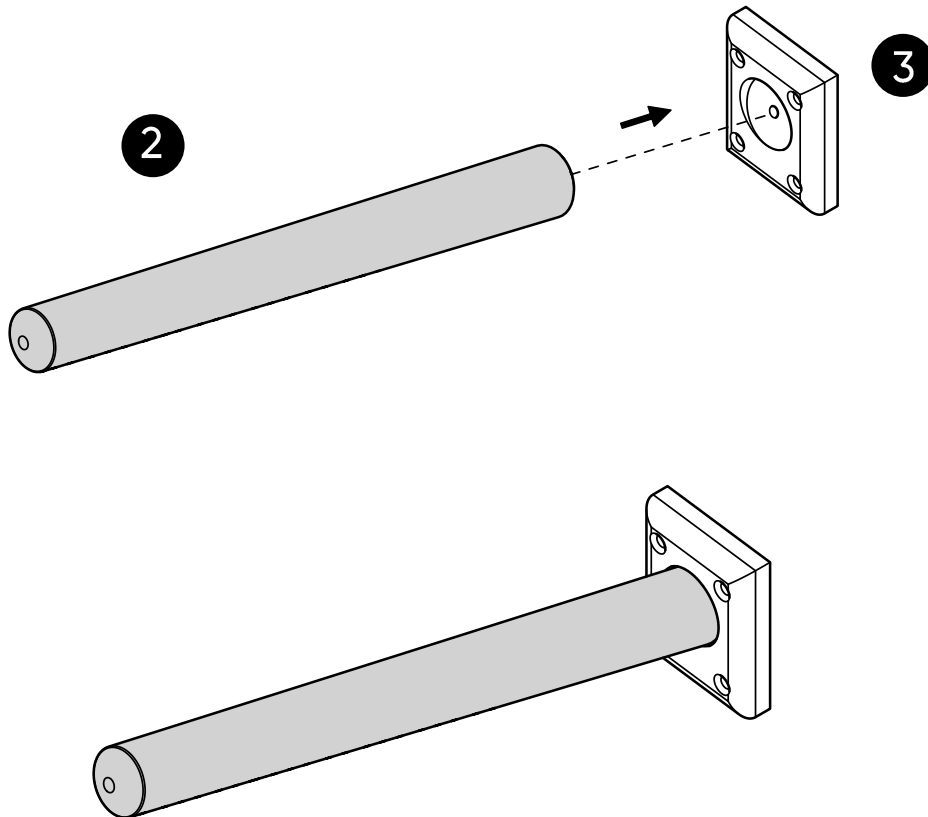 


2


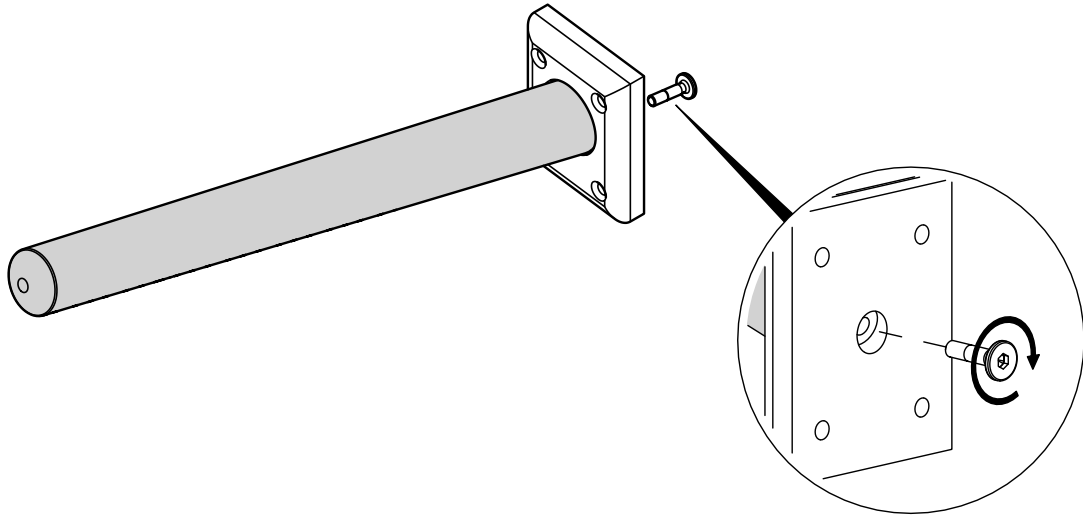 
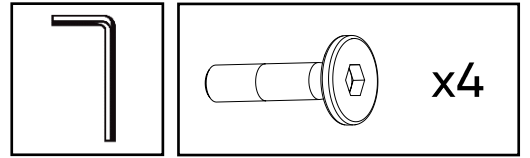 


3


 
1

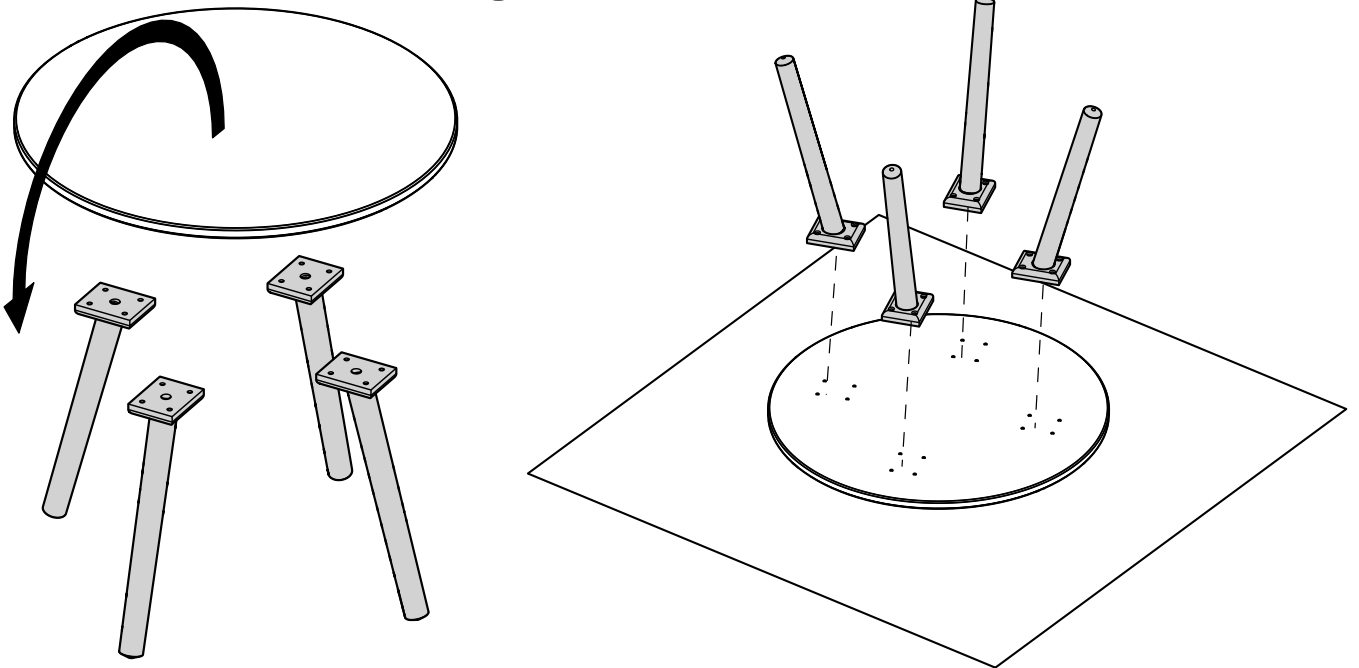





4

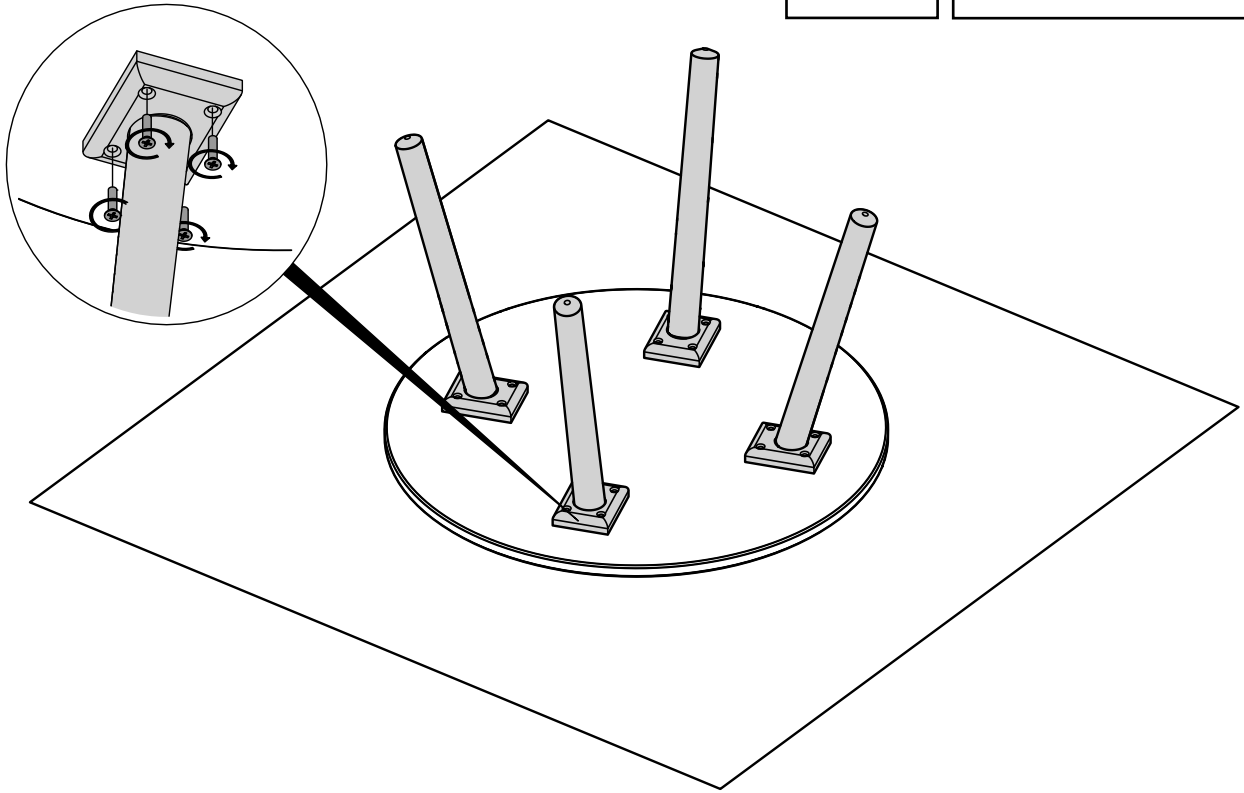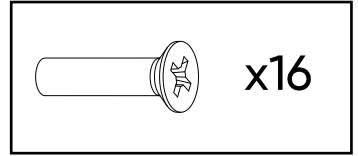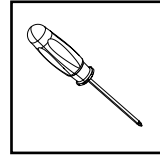   


5

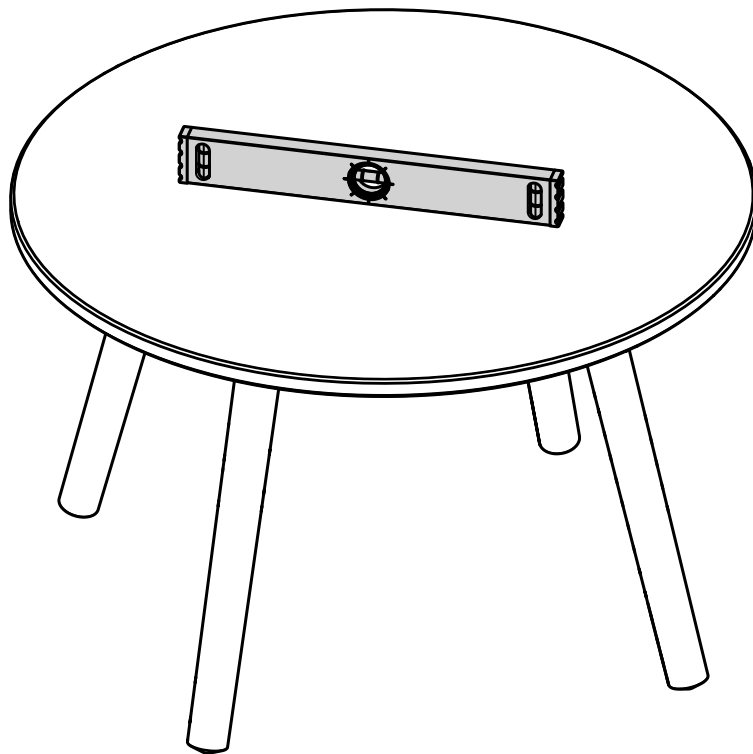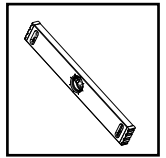  


6

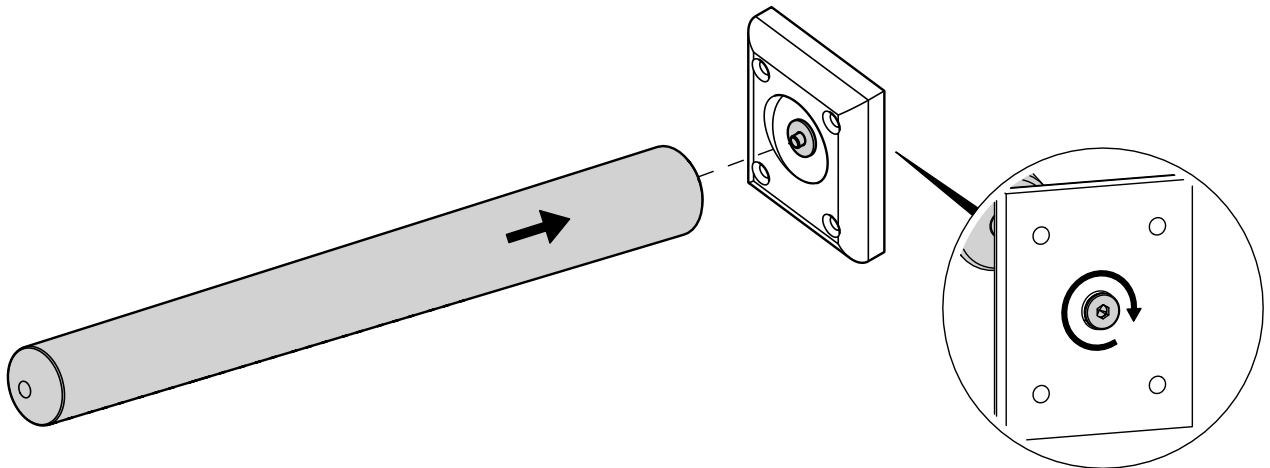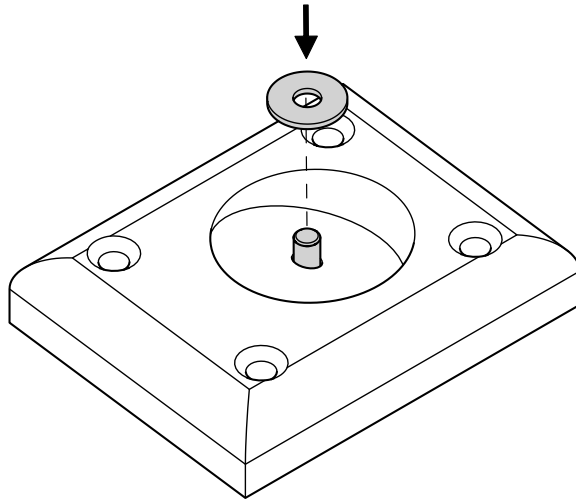  
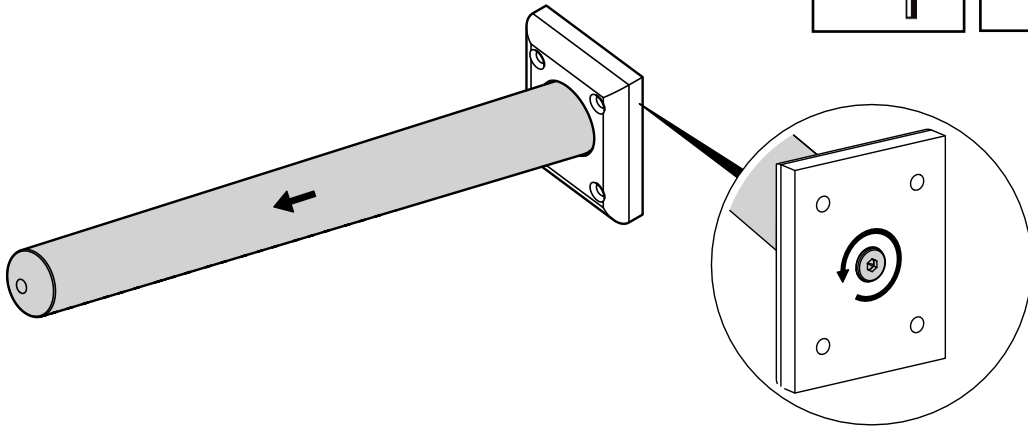 
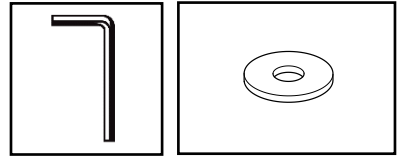 


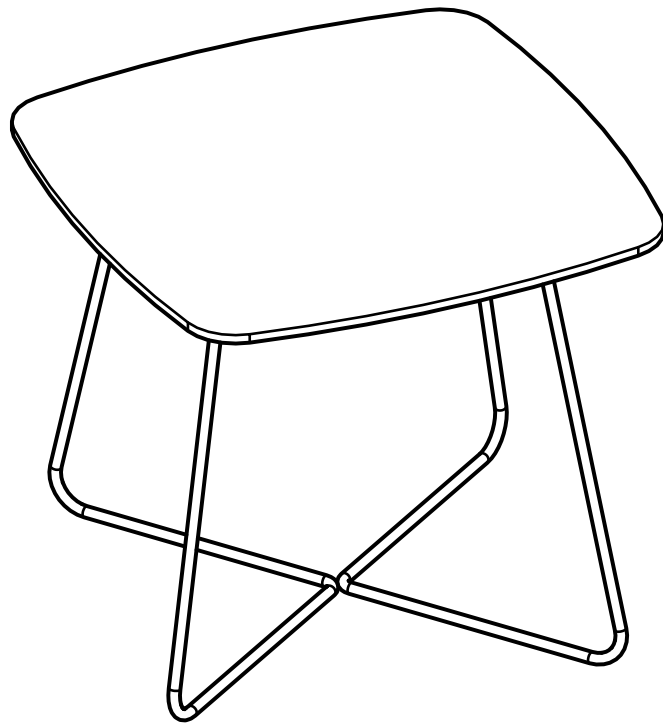 

1

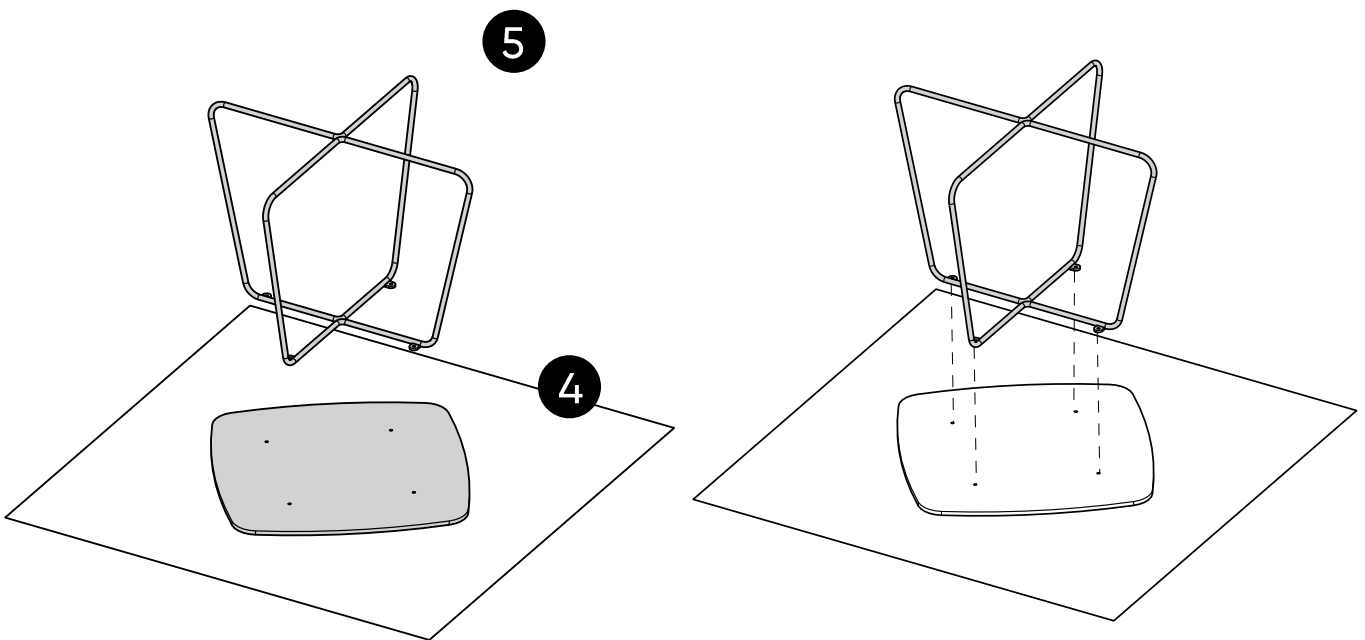 

2

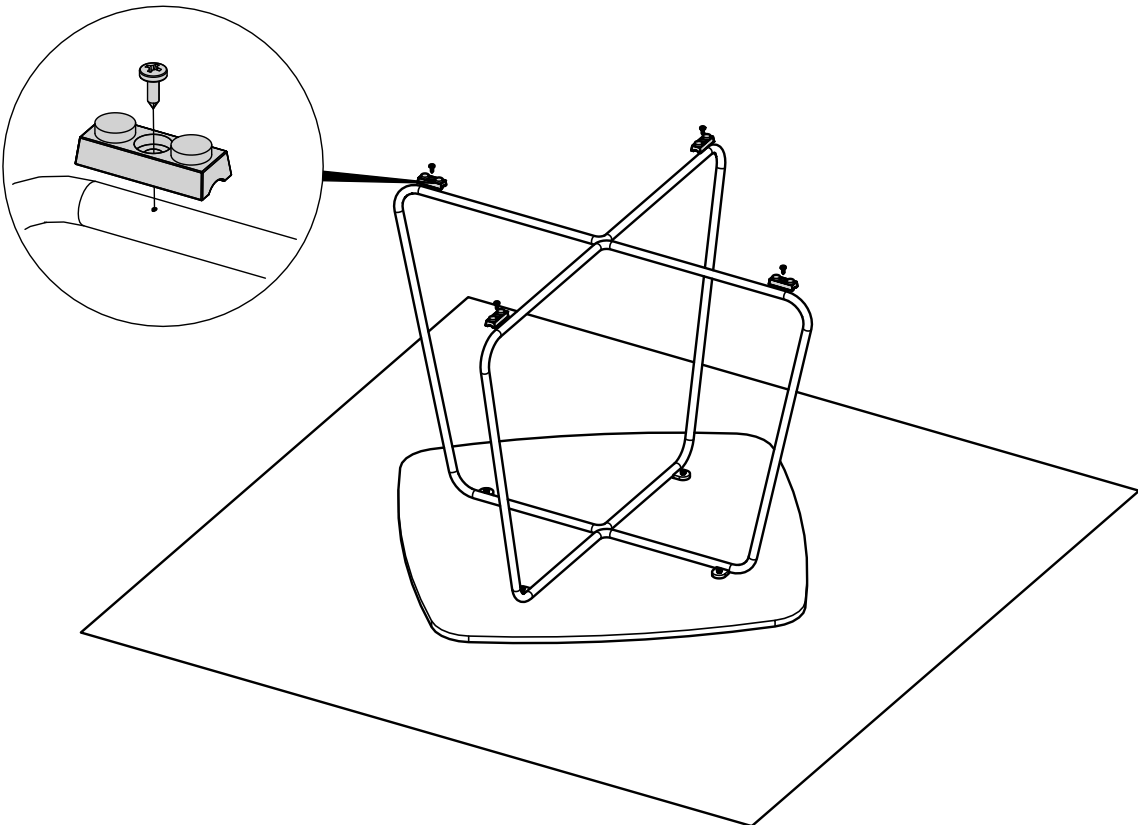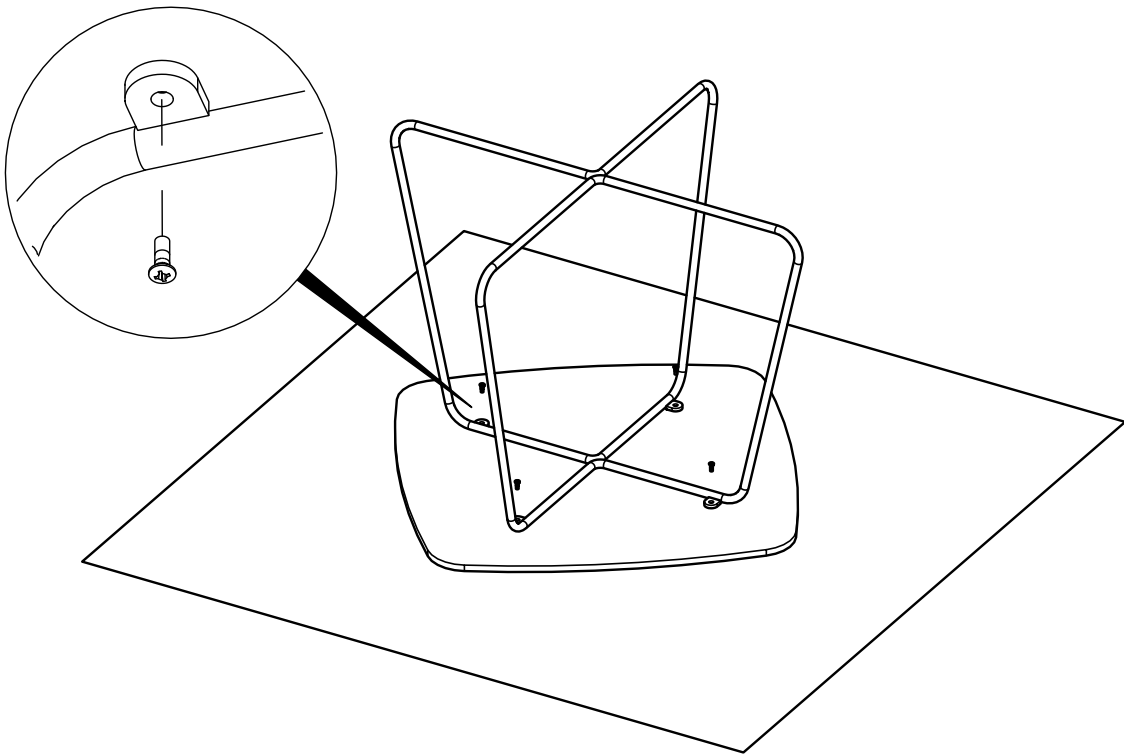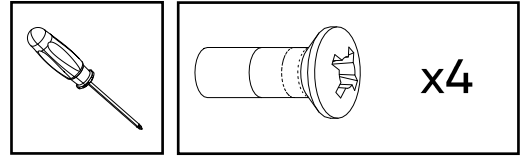   

Bejot Sp. z o. o.

ul. Wybickiego 2A, Manieczki, 63-112 Brodnica n. Poznania, POLAND

tel.: +48 (61) 281 22 25, e-mail: biuro@bejot.eu

www.bejot.eu

edition 02/2022