



## RH EXTEND

An RH chair is the perfect work tool, a chair that puts you in an optimal position all day, every day. A few simple adjustments is all it takes to make your RH chair fit your individual anatomy. RH chairs support an upright posture and active sitting, increasing your performance.

This elegant chair is as user-friendly as it is ergonomic. RH Extend is designed to give your body the best possible support and relaxation, while at the same time encouraging you to move around. RH Extend is easily adjustable to give everyone a unique working position. All RH Extend chairs are also available in ESD editions.

### Ergonomics

Providing complete support in any working position, enabling you to always sit correctly and breathe properly.

- Sculptured seat with waterfall front, combined with a tapered back featuring clear lumbar support and "Tvedt" cushion encourages movement and an upright posture. A user-friendly multiuser chair.
- Infinitely adjustable synchro-tilt mechanism, with a smooth action that can be locked in any chosen position.
- Interchangeable seat and back, easy to change (click on click off).

### Quality

- 10 year guarantee

Flokk is certified in accordance to:

- ISO 9001
- ISO 14001

RH Extend is certified in accordance to:

- EN 1335-1-2-3
- Möbelfakta
- BS 5459/2
- IEC 61340 (ESD)

### Environment

- Supports companies' environmental profile and credibility (CSR) - Cradle to cradle proof
- Easy to disassemble and no harmful chemicals
- ISO 14025 (EPD)
- GREENGUARD

### Design

Materials and surfaces communicating comfort and wellbeing through bodyfitting forms. Expressing human performance.

### Fire classifications

Foams and standard fabrics are tested to BS/EN 1021-1&2 (cigarette & match). Foam and fabric according to BS-5852 ignition source 5 (crib 5) can be delivered on request. Please contact our customer service for further information.

### Maintenance

Vacuum clean the chair with a furniture brush or wipe it with a clean cloth or sponge slightly dampened with lukewarm clean water. Do not remove any plastic parts or attempt to open the seating mechanism. Contact your Flokk dealer if the chair requires servicing or maintenance.

See <https://info.flokk.com/global/rh/user-guide> for RH Extend interactive user instruction guide.



Normal use up to 9 hour/day



RH EXTEND 100

RH EXTEND 120

RH EXTEND 200

RH EXTEND 220

## CHAIR MODELS AVAILABLE:

## RH EXTEND

- 100 – Medium back
- 120 – High back
- 200 – Medium back, with tilt mechanism and backrest that can be adjusted separately.
- 220 – High back, with tilt mechanism and backrest that can be adjusted separately.
- 200 ESD – Medium back, with tilt mechanism.
- 220 ESD – High back, with tilt mechanism.

MEASUREMENTS	RH EXTEND 100	RH EXTEND 120	RH EXTEND 200	RH EXTEND 220
Seat depth with seat slide	400-460 mm	400-460 mm	400-460 mm	400-460 mm
Seat depth	465 mm	465 mm	465 mm	465 mm
Seat width	461 mm	461 mm	461 mm	461 mm
Seat Height - standard gas stem	400-510 mm	400-510 mm	400-510 mm	400-510 mm
Seat angle adjustment	+3° – -10°	+3° – -10°	+3° – -10°	+3° – -10°
Height of lumbar support above the seat	180-255 mm	170-245 mm	180-255 mm	170-245 mm
Backrest height	510 mm	510 mm	620 mm	620 mm
Backrest height adjustment (from seat)	545-620 mm	650-725 mm	545-620 mm	650-725 mm
Backrest width	440 mm	440 mm	440 mm	440 mm
Back angle adjustment	-	-	24°	24°
Height of armrest above seat	205-305 mm	205-305 mm	205-305 mm	205-305 mm
Distance between armrests	375-576 mm	375-576 mm	375-576 mm	375-576 mm
Diameter of base	670 mm	670 mm	670 mm	670 mm

## OPTIONS

- |  |  |
|--|--|
| 1 Neckrest                             | 8 Armrest 8E Black/ESD, depth-adjustable |
| 2 Coat-hanger                          | 9 Castors for hard floors                |
| 3 Exchangeable pad                     | 10 Castors for soft floors               |
| 4 Decorative stitching                 | 11 Base 5X polished aluminium            |
| 5 Extra-large seat                     | 12 Base 5X black lacquered aluminium     |
| 6 Armrest 8E (height, depth, width)    | 13 Base 5X grey lacquered aluminium      |
| 7 Armrest 8S (height, width, rotating) | 14 Uniform upholstery                    |

## GAS STEMS

- 4Q, silver (standard), approx. 400-510 mm
- 4Q, black, approx. 400-510 mm
- 4P, silver, approx. 440-550 mm
- 4P, black, approx. 440-510 mm

For other options see the RH Price List.

The design and specifications of RHs' products are developed on an ongoing basis and the above formulations should not be perceived as completely final.

## ESD

RH Extend is available as an ESD chair. Flokk provides a 5 year warranty for ESD, conditional on castors and treads being cleaned regularly with a suitable cleaning agent.

The chairs are approved in line with IEC 61340(ESD). To work effectively the chair should be used in an ESD-adapted environment.