



LIM



Design: Jörg Bernauer

LIM is New Work. Designed for the workplace of today. And tomorrow.



KLÖBER 


LIM

BASIC SPECIFICATION (further functions and equipment features on the next page)

swivel chair


Function	<ul style="list-style-type: none">- Suitable for up to 130 kg body weight- Synchronised mechanism with automatic adjustment of backrest counter-pressure- Movement with optimum contact with the pelvis throughout pivot angle- 1:3,5 tilt ratio between seat and backrest- Opening angle of backrest 30°
Body weight adjustment	<ul style="list-style-type: none">- Automatic adjustment to individual body weight- Approx. 50-130 kg, depending on body proportions
Synchronised locking	<ul style="list-style-type: none">- Swivel angle locks at 0°
Seat height adjustment	<ul style="list-style-type: none">- 40-51 cm with mechanical depth spring, black- Safety gas-lift
Seat	<ul style="list-style-type: none">- Seat depth 46 cm- The membrane is a soft elastic support layer in the seat made from PP-TPO mixture (grey)- Optionally available with a replaceable mesh seat cover (Changeable) in 9 colours; or seat upholstery with 25 mm PU moulded foam cushion (CFC-free)
Backrest	<ul style="list-style-type: none">- Backrest shell made from black PP- Allows dynamic lateral left-right movement- Optionally available with soft elastic backrest membrane made from PP-TPO mixture (grey); or replaceable mesh backrest cover (Changeable) in 9 colours; or backrest upholstery with 10 mm PU moulded foam cushion (CFC-free)
Arm supports	<ul style="list-style-type: none">- Optional: arm supports height adjustable by 7 cm in black or white-grey; or fixed arm supports in black or white-grey
Castors	<ul style="list-style-type: none">- Load-dependent braked double hard castors- Black plastic, Ø 65 mm, for carpets
Transport option	<ul style="list-style-type: none">- Allows compact packaging
Standards / Certificates	<ul style="list-style-type: none">- GS-Zeichen der TÜV Rheinland LGA Products GmbH / DIN EN 1335 / DIN 4551 / DIN EN 16139- EU directive 90 / 270 EEC for display screen equipment / DIN EN ISO 9241- Greenguard certification
Warranty	<ul style="list-style-type: none">- 5 years (see terms and conditions of sale and delivery)

Dimensions

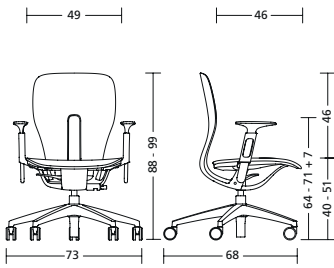


lim98

with arm supports: 12 kg
without arm supports: 11 kg

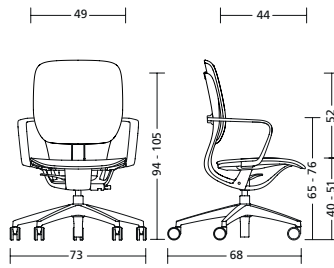

lim98

with arm supports: 12 kg
without arm supports: 11 kg

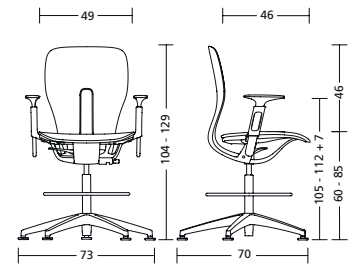

lim98

with arm supports: 12 kg
without arm supports: 11 kg


Fabric requirement

Model	same colour seat and backrest	different colours seat	different colours backrest
lim98	0,98 x 1,40 m	0,63 x 1,40 m	0,51 x 1,40 m

Leather requirement on request

LIM

swivel chair

Model	Art. no.	Price category for upholstery fabric								
		00	04	05	06	17	48	09	19	
			Chicago Nova Era	Fame Malta Step Cura	Evida	Comfort +	Leather premium +	COM	Customer leather	
	lim98									

LIM PURE

Back plastic	seat with membrane	P500	-	-	-	-	-	-	-	-
	seat upholstered	P900	-							

LIM MEMBRANE

Back with membrane	seat with membrane	P550	-	-	-	-	-	-	-	-
	seat upholstered	P950	-							

LIM PADDED

Back upholstered	seat upholstered	P990	-							
------------------	------------------	------	---	--	--	--	--	--	--	--

Option	Description	Code	lim98	
Model	seat and backrest shell	black	3961	●
		white-grey	3962	○
Detail	backrest clip and lordosis mount (not possible in conjunction with PURE P500, P900)	black	D061	●
		white-grey	D062	○
Arm supports	without arm supports	3500	●	
	height-adjustable arm supports	black	3523	○
		white-grey	3524	○
	fixed arm supports	black	3533	○
white-grey		3534	○	
Base colour	plastic	black, 5-star	3217	●
		white-grey, 5-star	3218	○
	aluminium (only in conjunction with counter chair)	black, 5-star	3201	○
		white-grey, 5-star	3205	○
Castors / Glides	hard castors Ø 65 mm, for carpets	3103	●	
	soft castors Ø 65 mm, for hard floors	3104	○	
Counter chair	glides and footrest ring (only in conjunction with aluminium base)	3107	○	
	felt glides and footrest ring (only in conjunction with aluminium base)	3117	○	
	constantly braked castors ø 65 mm and footrest ring (only in conjunction with aluminium base)	3127	○	
Seat height	40-51 cm with mechanical depth spring	3301	●	
	60-85 cm for counter chair	3305	○	
	42-56 cm with mechanical depth spring (not possible in conjunction with PURE P500)	3306	○	
More features	lordosis support (height adjustable by 6 cm; not possible in conjunction with PURE P500, P900)	3817	○	
	seat surface adjustment (with P500 only in conjunction with fixed arm supports; with P900 in conjunction with height-adjustable or fixed arm supports)	3711	○	
	Changeable* 2 pcs (only in conjunction with membrane in seat and back)	0033	○	
	Changeable* 1 pc (only in conjunction with membrane in seat or back)	0034	○	
	Parcel shipping in small packaging *** (not possible in conjunction with counter chair)	3991	○	
	seat and backrest upholstered in different colours** (only in conjunction with PADDED P990)	P001	○	

* replaceable mesh cover available in 9 colours: black (CH01), grey-brown (CH02), sand (CH03), amarena red (CH04), mustard yellow (CH05), olive (CH06), blue-grey (CH07), white-grey (CH08), anthracite (CH09). Changeable retrofittable accessories can be found on the accessories page.

** P001: Comfort + (17) double the price

*** freight and packaging net/chair: on request

The membrane is a soft elastic support layer in the seat and backrest made from grey PP-TPO mixture