

HÅG's mission is to give movement and variation to the workplace. HÅG products stimulate intuitive and natural movement of the body and variation of sitting postures leading to improved health and productivity.

HÅG Conventio Wing

- A dynamic chair that is specially designed for meetings and conferences.
- The integrated rocking mechanism inspires movement and variation, improving the ability to stay alert and concentrated in long meetings.
- Constructed from lightweight materials that can withstand heavy use. The wing-shaped back gives the chair a fresh shape and makes it more robust.
- Simple maintenance makes the chair well suited as a general purpose chair for conferences, schools, universities, libraries, canteens, cafés and hotels.
- 4 legged models are stackable: 15 chairs can be stacked on top of each other.
- HÅG Conventio Wing is self-stabilizing on uneven ground and the chair will never be unstable when sitting.



Design: Peter Opsvik. Patent- and design protected.



QUALITY

10-year guarantee:

HÅG provides a ten-year guarantee against production defects on all office chairs that are in normal use for up to 9 hours per day.

Certifications:

- Tested in accordance to EN 16139 (replacing EN 13761), EN 1729, ANSI/BIFMA X5.1 and GS mark and Swedish Möbelfakta.
- Flokk is certified by DNV-GL according to ISO 9001.
- The models with five star base are tested in accordance to EN 1729 only.

Maintenance:

- Vacuum clean the chair with a furniture brush or wipe it with a clean, white cloth or sponge slightly dampened with clean lukewarm water. Do not remove any plastic parts or attempt to open the seating mechanism. Contact your Flokk dealer if the chair requires servicing or maintenance.

Fire safety information

- CMHR foam (fire resistant foam) is available on request, but must be specified at time of order and adds approximately two to five weeks to delivery lead times.
- Model 9841 is made in flame retardant plastic and is CAL TB 133 approved.

ENVIRONMENT

- Easy to disassembly without using any special tools.
- Contains 21,8% of recycled material (post-consumer and post-industrial waste).
- Low carbon footprint at 34,8 kg CO₂ equivalents.
- Contains no hazardous chemicals.

Certifications:

- Flokk is certified by DNV-GL according to ISO 14001.
- Environmental product declaration (EPD) – life cycle analyse of the chair based on 14025-EPD.



- GREENGUARD certificate – ensures that the chair meets strict chemical emissions limits.
- Möbelfakta certificate – Swedish environmental and quality and social responsibility certificate.

Materials specifications for HÅG Conventio Wing 9811:

- Plastics 72%, Aluminium 21%, Steel 3%, Various 4%, PVC 0%.
- Total weight of product 4,4 kg (with armrests).
- Share of recyclable material: 100%.

MODELS AND MEASUREMENTS




Physical measurements HÅG Conventio Wing	9811	9821	9831	9812	9822	9832
Seat height, measured with 64 kg load [1]	430	430	430	375-515	380-520	380-520
Back height (mm) [2]	380	380	380	380	380	380
Diam. footbase (mm) [3]	-	-	-	635	635	635
Seat depth (mm) [4]	420	420	420	420	420	420
Seat width (mm) [5]	430	430	430	430	430	430
Chair width (mm) [6]	500*	500*	500*	465* (635) ¹⁾	465* (635) ¹⁾	465* (635) ¹⁾
Armrests (mm) [7]	245	245	245	245	245	245
Weight (without armrests)	4,4 kg	4,6 kg	4,8 kg	6,8 kg	7,0 kg	7,2 kg
Tilt range: Neutral	-5°	-5°	-5°	-5°	-5°	-5°
Tilt range: Forwards	12°	12°	12°	12°	12°	12°
Tilt range: Backwards	11°	11°	11° </td <td>11°</td> <td>11°</td> <td>11°</td>	11°	11°	11°

All measurements in mm. Where a chair is adjustable, minimum and maximum measurements are listed.

¹⁾ Max. diagonal diameter.

Please note that the measurements are not absolute. They may vary slightly from chair to chair.

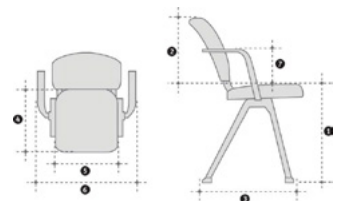

CONFIGURATION OPTIONS

- Removable cover available for all HÅG Conventio Wing models. Can be removed for cleaning or replacement.
- Models with five star base (models 9812, 9822 and 9832) are height adjustable and provides support for alternative positions of the feet.
- 4 legged models (9811, 9821 and 9831) have legs in aluminium – matt black or silver coloured.

- Optional extras: Plastic armrests, chair suspension (clears floor space and makes cleaning easy), connecting device (ensures easy linking – only available for 4 legged models), trolley and HÅG writing tablet (right-handed with black plastic tablet and aluminium arm. Fold down tablet for safe escape and stacking of chair. BIFMA approved).
- The seat and back shells are available in 5 colours; Clay, Sea Green, Black, White and Red.



Clay



Sea Green



Black



White



Red